

Accelerator Pump Diaphragms




A


- A worn accelerator pump diaphragm causes the car to hesitate, stall or even backfire upon acceleration.



Fits Ford w/2 & 4 barrel carburetors 1982-60.

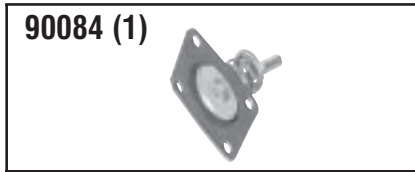

Fits Ford w/2 bbl. V8 & V6 1986-83.

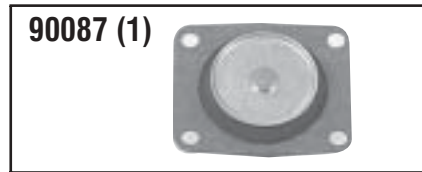


Fits Chrysler, Ford, GM & Jeep w/Holley 2 & 4 bbl V8 1991-57.

A/C Compressor Bypass Pulleys

A/C Compressor Bypass Pulley Applications, page 181




1997-90 Ford E, F Series, Ranger 5.0L & 5.8L.

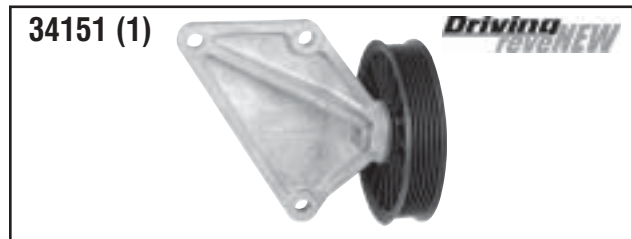

1995-88 Taurus, Sable w/ 3.8L.



1995-88 GM Trucks w/ 5.7L and 4.3L.

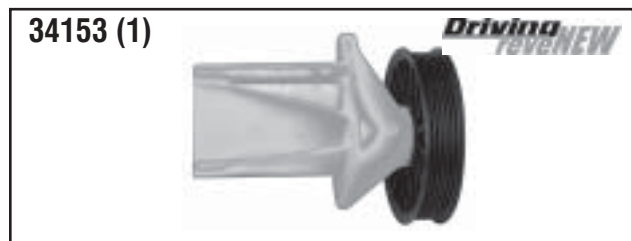


1995-89 Buick, 1993 Cadillac, 2002-90 Chevrolet, 1995-89 Oldsmobile, 2002-89 Pontiac.

A/C Compressor Bypass Pulleys

HELP! Introduces another "Solution Driven" category to the Aftermarket.

Problems

- A customer has a seized A/C compressor
- The serpentine belt is torn and the car can't run without it.
- The customer can't afford or doesn't want to spend "big money" on this old vehicle.

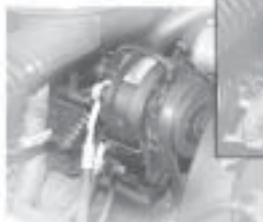

Options \$\$\$\$

1. Replace A/C compressor = \$750 (parts & labor)
2. Try to find a shorter belt and bypass the compressor (if even possible)

Solution

1. Remove A/C compressor
2. Install new HELP! A/C Bypass Pulley
3. Install OE size belt

Features & Benefits of our HELP! AC Bypass Pulleys

- Easy installation & complete applications
- Affordably priced
- OE quality bearing

HELP!
Makes Customers for **Life**

NEW PRODUCT HOTLINE - 1-800-336-3575

*Combined for



Air Cleaner Hardware

Air Cleaner Hardware
Applications, pages 181-184

HELP!
Underhood

- Stock item for any shop involved in carburetor/fuel injection repairs and general service
- Replace air cleaner hold-down to prevent dirt and water from entering the engine where they can cause damage and/or performance problems
- Many air cleaner covers require special attaching hardware

41065 (1) For Better Value, Order 41072



Air Cleaner Wing Nut

Universal 1/4-20.
Air Filter-Tite! # 41200 (1)

41066 (1)



Air Cleaner Hold-down Kit

Universal. Mates to 1/4-20 and 5/16-18 carburetor threads. Includes 1/4-20 x 9" threaded rod and wing nut.
Air Filter-Tite! # 41255 (1)

41067 (5)



Air Cleaner Wing Nut Assortment

M6 x 1.0 and M8 x 1.25.
Air Filter-Tite! # 41206 (1)

Air Cleaner Screw & Clip

41071 (2)



- Screw inserts fail when changing air filter
- Screw inserts not available separately from Dealer
- HELP!'s screw & clip fixes the job
- No need to replace entire air cleaner box



Ford/Mercury models with EFI 1996-87. Simple repair for stripped out air boxes. Secures air intake box. 1/4".
Air Filter-Tite! # 41255 (1)

HELP!
Makes Customers for **Life**


41072 (3)*



Air Cleaner Wing Nuts

Assortment of universal style air cleaner wing nuts. Includes 1 each of the following popular sizes: 1/4-20 (41065), 5/16-18 (41209), M8-1.25 (41210).

41073 (2)*

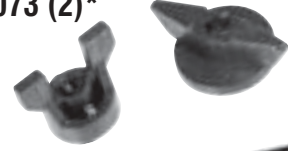

Air Cleaner Wing Nuts

Ford and Chrysler nylon style. Includes one 1/4-20 (41083) for Chrysler 1983-78 and one 1/4-20 or M6 self-tapping (41081) for Ford 1990-81.

41081 (1) For Better Value, Order 41073



Air Cleaner Wing Nut

Ford 1990-81. 1/4-20 or M6 self-threading nylon.
Air Filter-Tite! # 41201 (1)

41083 (1) For Better Value, Order 41073



Air Cleaner Wing Nut

Chrysler 1983-78. 1/4-20.
Air Filter-Tite! # 41202 (1)


41095 (1)



Air Cleaner Wing Nut

Universal & Datsun/Nissan style 2002-74. M6 x 1.0.
Air Filter-Tite! # 41203 (1)

41101 (3)*

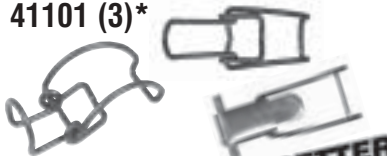

Air Cleaner Hold-Down Clamp Assortment

Assortment contains 3 clamps (41104, 41105, 41109) that fit Ford Contour, Mercury Mystique 1997-95, Ford Escort, Mercury Tracer with 1.8L, 1.9L 1996-91.

41112 (2) For Better Value, Order 41114




Breather Element Clips

Ford models 1997-71: Use with elements: Motorcraft; FA576, FA642, FA675. Fram: CA3554, CA3749, CA3525; Purolator; AB3125, AB3124, AB3127.
HELP!® 41102 (15) Boxed
Air Filter-Tite! # 41250 (1)

Air Cleaner Hardware (continued)

A


41113 (2) *For Better Value, Order 41114*



Breather Element Clips

GM models 2002-76. Use with breather elements: AC; FB59; Fram; CA19; Purolator; AF9.
Air Filter-Tite! # 41251 (1)


41114 (4)*



Breather Element Clips


Assortment covers Ford 1996-71 and GM 2002-76. Use with breather elements: Motorcraft FA576, FA642, FA675; Fram CA19, CA3554, CA3749, CA3525; Purolator AB3125, AB3124, AB3127, AF9; AC Delco FB59. **Kit contains 41112 and 41113.**

41207 (1)



Air Cleaner Wing Nut

Universal 5/16" or M8 self-threading nylon.




Breather Element Clips are frequently broken or lost when removing air cleaner for service.

Air Conditioning - O-Rings

COOL-AID!


34120 (4)



Compressor Seal Assortment

Ford, Nippondenso GP148. Fits Ford R12 manifold ports.


34045 (11)



O-Ring & Seal Assortment

Metric & Import, R134a system. Ind. #010, 011, 013, 015, 111, 270, 012, 370 Seal.


34141 (8)



O-Ring & Seal Assortment

Metric & Import R12 compressors.


34010 (14)



O-Ring Assortment

6 various sizes. R12 system. Ind. # 008, 011, 012, 013, 015, 017.


34011 (8)



O-Ring Assortment

GM captive O-ring fittings, R12 system. Ind. # 108,110,112,113.


34014 (6)

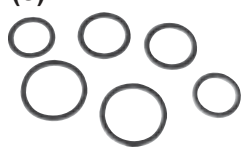

O-Ring Assortment

GM dual fittings, R134a systems. Ind. #016(2), #905(2), #906(2).


34016 (14)



O-Ring Assortment

6 various sizes. R134a systems. Ind. #008, 011, 012, 013, 015, 017.


34017 (8)



O-Ring Assortment

GM captive O-ring fittings, R134a system. Ind. # 108(2), 110(2), 112(2), 113(2).

34040 (9)



O-Ring Assortment

Metric and Import applications, R12 system. Ind. #010, 011, 013, 015, 111, 0.270 Seal. Various sizes.

Air Conditioning - O-Rings (continued)

34110 (4)



O-Ring Assortment

GM, Frigidaire, Harrison styles w/2 switch & 2 manifold ports, R12 system.

34115 (4)



O-Ring Assortment

GM, Frigidaire, Harrison styles w/2 switch & 2 manifold ports, R134a system.

34123 (2)



O-Rings

Ford compressor FX115 suction & discharge, R134a system. Ind. #211.

34122 (4)



Seals

Ford FS6. Red R12 system. Manifold ports. Oval cross section.

34126 (4)



Seals

R134a ports on Ford FS6 compressor, oval cross section.

Air Conditioning - Seals & Gaskets

COOL-AID!

34130 (2)



Air Conditioning - Gaskets

Metal manifold gasket, Chrysler w/ Nippondenso C171, A590 style compressor.

34133 (2)



Metal Gaskets

Chrysler 6C17. Seals compressor suction and discharge ports. R134a systems.

34033 (3)



Metal Gasket Kit

Chrysler products, 1978 and up. 1 gasket for condenser, and 2 gaskets for drier.

34030 (2)



Metal Gaskets

Chrysler products, 1978 & up. 2 drier gaskets.

34032 (2)



Metal Gaskets - Expansion Valves

Chrysler block, 1978 & up.

34112 (2)



Sealing Washers

GM compressors w/3/4" port openings, 1992 & up.

34113 (2)



Sealing Washers

GM compressors w/5/8" port openings, 1992 on. 2 sizes.

Air Conditioning - Service Parts

COOL-AID!

A

34310 (2)



Hose Clamps

For #6 and #8 hoses. Special depth stop feature holds clamp securely in proper position.

34311 (2)



Hose Clamps

#10/12 hose clamps with depth stops.

34806 (1)



Hose Splice Kit

For 5/16" ID hoses. Includes barbed connector w/ hose depth stop and 2 clamps.

34808 (1)



Hose Splice Kit

13/32" ID hoses. Includes barbed connector w/ hose depth stop and 2 clamps.

34812 (1)



Hose Splice Kit

For 5/8" ID hoses. Includes barbed connector w/ hose depth stop and 2 clamps.

34312 (1)



Insulation Tape

2" wide x 12" long. Waterproof tape for exposed A/C lines and fittings.

34813 (1)



Line Tap Valve

Fits 1/4", 5/16" & 3/8" OD, R12/R22. Used to tap into systems not having service ports.

34260 (1)



Orifice Tube

GM 1977& up w/ (CCOT) systems.

34265 (1)



Orifice Tube

0.67" dia. Ford. w/(FCCOT) systems, blue.

34822 (1)



Orifice Tube Repair Kit

Ford. Eliminates line replacement when orifice tube is damaged.

34210 (3)



Service Valve Caps

Two large & one small. R12. Replace missing or cracked service caps.

34617 (1)



Thermal Limiter Fuse

Thermal protection for compressor used on GM trucks up to 1985, GM cars 1976-71, responds to signal from Thermal Limiter Switch.

Air Conditioning - Spring Lock Repair

COOL-AID!

34020 (12)



Spring Lock Repair Kit

Ford garter springs. R12. Includes 8 O-rings and 4 garter springs.

34025 (12)



Spring Lock Repair Kit

Ford garter springs. Includes R134a compatible 8 O-rings and 4 garter springs.

34510 (1)



Spring Lock Tool

Ford garter spring fittings. Required for disassembly. 3/8" Color Coded - Red.

NEW PRODUCT HOTLINE - 1-800-336-3575

Air Conditioning - Spring Lock Repair (continued)

COOL-AID!

34511 (1)



Spring Lock Tool

Ford garter spring fittings. Required for disassembly. 1/2" Color Coded - Blue.

34513 (1)



Spring Lock Tool

Ford garter spring fittings. Required for disassembly. 3/4" Color Coded - White.

Air Conditioning - Tools

COOL-AID!

34461 (1)



Clutch Installer Tool

Required to correctly install clutch hub. GM style A6 and R4.

34518 (1)



Clutch Removal Tool

For proper removal of clutch hub from Nippondenso and other import car compressors.

34460 (1)



Clutch Tool

GM style compressor types A6 and R4. For proper removal of clutch hub.

34410 (3)



Depressors and Gaskets

Fits 1/4" hose end. Replacement A/C charging hose parts.

34415 (1)



Fitting Adapter

Discharge ports. Early Fords. Used to adapt 1/8" fitting to 1/4" service hose.


34412 (1)



Fitting Adapter

Discharge service ports. Adapts 3/16" fitting to 1/4" service hose.

34519 (1)

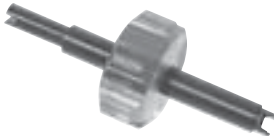

Valve Core Tool

Standard and GM large bore. For removal & installation of valve cores.

34012 (3)



Valve Cores

Standard & GM large bore. R12 system. Use core tool #34519 to install and remove.

34013 (3)



Valve Cores

Standard and GM Large bore. Ford and GM valve cores. R134a systems.

A.I.R. Pipe Clamps

HELP!
Undercar

- Catalytic converter A.I.R. pipe clamps ensure a tight, leak-free connection.

03119 (1) *For Better Value, Order 03121*



1/2" clamp, fits various GM vehicles 1993-76.

03121 (2)*



Kit includes one 1/2" (03119) and one 3/4" (03122) clamp. Fits various GM, Ford and AMC vehicles 1993-76.

03122 (1) *For Better Value, Order 03121*



3/4" clamp, fits various Ford and AMC vehicles 1993-79.


Visit us at www.motormite.com

BETTER VALUE


Alternator Bolt Assortments




- Specially designed for use in alternator
- Meets grade 8 or metric class 10.9 specifications
- Zinc plated to resist rust or corrosion

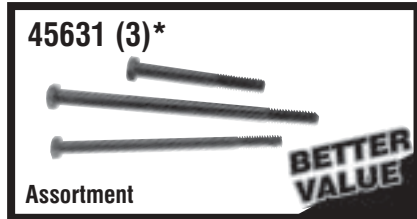

GM standard alternator bolts. Contains 1 each of the following sizes:
3/8"-16 x 6" (72078), 3/8"-16 x 3-1/8" (72079), 5/16"-18 x 5" (72080).

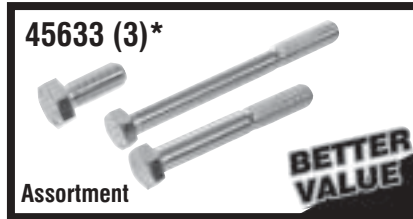


GM metric alternator bolts. Contains 1 each of the following sizes: M10-1.5 x 80mm (72081), M10-1.5 x 105mm (72082), M10-1.5 x 25mm (72087).

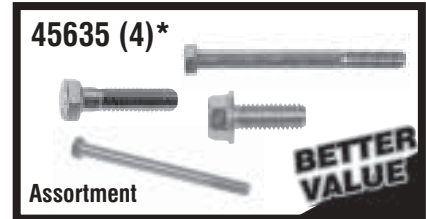


GM Alternator bolts. Contains 1 each of the following sizes: 7/16-14 x 5-1/2" (72083), 3/8-16 x 4" (72084), 3/8-16 x 1" (72085), 5/16-18 x 1-1/4" (72086).


Alternator Bolts

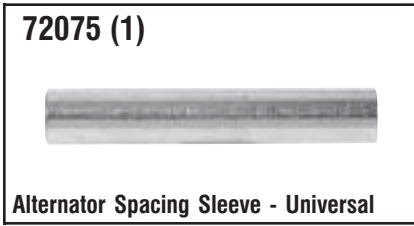


Prevents damage to alternator body.

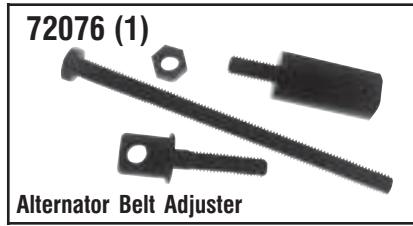


Fits GM V8 engines.

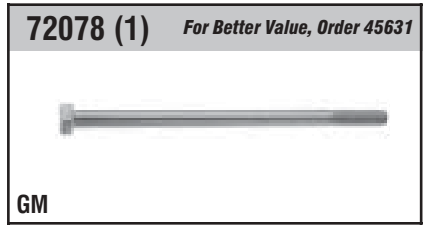


3/8-16 x 6".

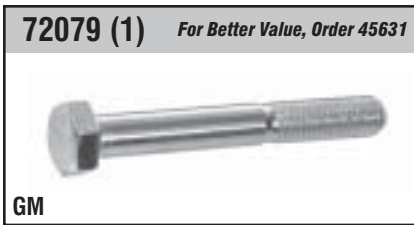

3/8-16 x 3-1/8".

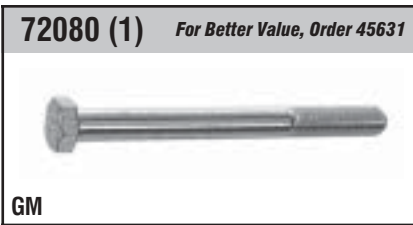


5/16-18 x 5".

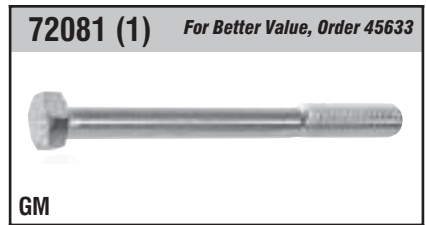


M10-1.50 x 80mm.




M10-1.50 x 105mm.

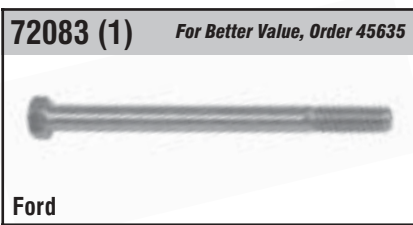


7/16-14 x 5-1/2".

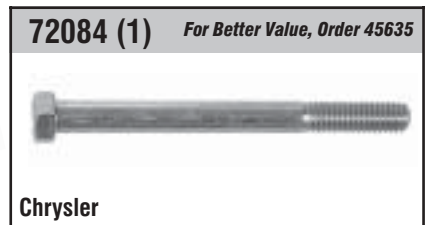


3/8-16 x 4".

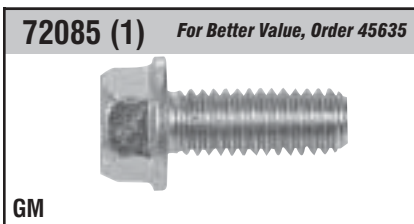

3/8-16 x 1".

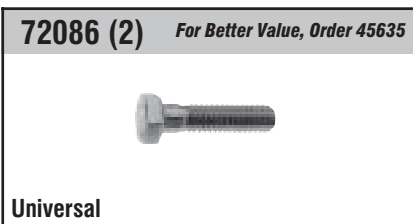

5/16-18 x 1-1/4".

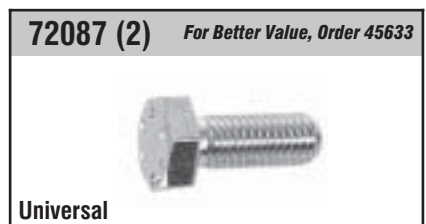

M10-1.50 x 25mm.

NEW PRODUCT HOTLINE - 1-800-336-3575

*Combined for

