

# Radiator Drain Cocks

Radiator Drain Cocks  
Applications, pages 510-518

**HELP!**  
Underhood

- Coverage for composite radiators
- Plastic drain cocks fail when thread strips or plastic deteriorates and cracks
- Designed for use by radiator shops and general mechanics
- OEM replacement drain cocks

**49126 (1)**



Drain Cock Socket. Used to open and close drain cocks easily and without damage. 3/8" drive for ratchet use. 3/4" hexed for wrench use.

**61102 (1)**



Screw-in style. 3/8" NPT. Brass construction.

**61103 (1)**



Standard 1/8" NPT. Brass.

**61104 (1)**



Jeep 1991-87 Standard 1/4" NPT. Brass.

**61105 (1)**



AMC/Jeep 1996-67 With outlet fitting, 1/8" NPT. Brass.

**61106 (1)**



With outlet fitting, 1/4" NPT. Brass.

**61108 (1)**



Ford. Long stem push-in style with captive thread.

**61109 (1)**



GM, Ford, Toyota 2003-81. Short stem push-in style with captive thread.

**61110 (1)**



GM, Chrysler, Geo, Honda, Isuzu, Mazda, Mitsubishi, Toyota 1994-71. Screw-in type. M12-1.25.

**61112 (1)**



Toyota and Honda. Screw-in type. M14-1.25.

**61114 (1)**



Subaru. Screw-in type. M10-1.25.

**61116 (1)**



Nissan/Datsun and Subaru. Screw-in type. M14-1.25.

**61118 (1)**



Isuzu/Subaru 1994-81 Fits most Modine radiators.

**61121 (1)**



Chrysler, Jeep 2004-89. Push-in style with captive thread.

**61122 (1)**



GM. Use with plastic radiator tanks with internal shutoff seat. Oversize thread 1/2"-18.

**61123 (1)**



Infiniti, Nissan, Mazda, Hyundai, Subaru 2003-84. Screw-in type. M12-1.25.

**61124 (1)**



Nissan and Mazda. Screw-in type. M10-1.25.

**61125 (1)**



Honda and Mitsubishi. Screw-in type. M14-2.0.

**R**

## Radiator Drain Cocks (continued)

61126 (1)



Jeep, Eagle 1992-88. Screw-in type. 5/8"-18.

61127 (1)



Ford 2003-85. Screw-in type. M14-2.0.

61129 (1)



Chrysler 1995-87. Screw-in type. 5/8"-18.

61132 (1)



GM 1993-87. Screw-in type w/O-ring.

61133 (1)



GM 2003-92. Push-in twist lock.

61134 (1)



Chrysler, Jeep 2003-93. Push-in twist lock.

**R**

61136 (1)



GM 2003-93. Screw-in type w/O-ring. M15-1.5.

61137 (1)



Nissan and Infinity 2003-91. Screw-in type w/O-ring. M10-1.25.

61138 (1)



Ford 2002-95. Screw-in type. M10-1.5.

61141 (1)



Subaru 1989-80. Screw-in style. M16-1.5.

## Radiator Flush Kits

**HELP!**  
Underhood

47016 (1)



Universal. Includes tees to fit 1/2", 5/8", and 3/4" hoses, clamps, garden hose adapter, and flush spout and tee cap.

47018 (1)



Universal. Includes 5/8" & 3/4" tees, clamps, garden hose adapter, and tee cap.

## Radiator Flush Tees

**HELP!**  
Underhood

Size	HELP! Carded # (Qty.)	HELP! Boxed # (Qty.)
1/2"		47122 (1)
5/8"	47152 (1)	47126 (1)
3/4"	47153 (1)	47120 (1)
Assortment. Includes three tees to fit hoses with diameters of 1/2", 5/8" and 3/4".		47154 (3)*



## Radiator Parts

**HELP!**  
Underhood

10684 (2)



Clip Nuts

M6-1.0. Universal. Speed nut design. Attaches upper portion of shroud to radiator or frame.

48001 (1)



Coolant Air Bleeder

Coolant outlet connects lower intake manifold outlet to heater supply tube. Fits Dodge Intrepid and Chrysler Concord 2.7L 2004-98. Complete package includes bleeder screw and O-ring for efficient installation. High temperature molded-in gasket ensures leakproof seal.

10665 (1)



Radiator Insulator

Universal. C-style bracket. Fits top or bottom mounting bracket. Perforated design allows use on different size radiators. Fold to fit specific bracket. Made from a resilient rubber compound.

**R**

### Radiator Overflow Tube Repair Kit


10691 (1)



Repair kit provides a quick and easy solution to broken overflow tubes. Eliminates the need to replace the entire radiator. Fits any plastic radiator with a standard 1.67" plastic filler neck.

**HELP!**  
Makes Customers for **Life**

10680 (2)

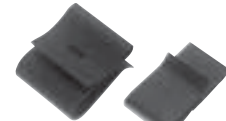

Shroud Clip Assortment

Universal. Used to attach shroud to vehicle frame. Two different sizes. Made from spring steel for a reliable installation.

## Radiator Reservoirs & Caps

Radiator Overflow Cap  
Applications, pages 519-520

**HELP!**  
Underhood

82300 (1)



Reservoir

Universal; Consolidated design allows for easy mounting. Use for coolant or washer fluid.

82310 (1)



Reservoir

Radiator overflow reservoir. Fits GM C & K-Series 2002-88.

82311 (1)



Reservoir

Jeep Cherokee 4.0L 1996-87.

**NEW PRODUCT HOTLINE - 1-800-336-3575**

## Radiator Reservoirs & Caps (continued)

82590 (1)



**Coolant Cap**

GM. Vented.

82594 (1)



**Coolant Cap**

Buick LeSabre, Pontiac Bonneville 2001-00; Chevrolet/GMC Express, Savanna 2001-96; S-Series Blazer, Jimmy, Pickup 2001-94.

82595 (1)



**Coolant Cap**

Jeep Grand Cherokee 1994-91.

82596 (1)



**Coolant Cap**

GM; 1994-82. Non-vented.

82598 (1)



**Coolant Cap**

Ford Windstar, Mercury Villager & Nissan Quest 1996-93.

82599 (1)



**Coolant Cap**

Infiniti G20, J30, I30, Q45, QX4 2001-91, Nissan 200SX, 240SX, 300ZX, Altima, Axxess, Maxima, NX, Pathfinder, Pickup, Pulsar, Sentra, Stanza 2001-89.

R

S

## Radio Knobs


**HELP!**  
Interior

76891 (1) *For Better Value, Order 76893*



GM Volume and tuner knobs. Fit GM 1994-82.

76893 (2)\*

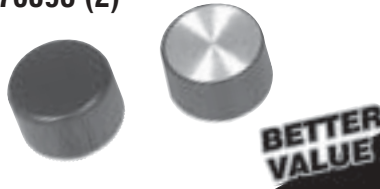

Volume and tuner knobs. Fits various GM models 1994-82 and various Ford models without electronic radios 1990 & up. **Kit contains 76891 and 76895.**

76895 (1) *For Better Value, Order 76893*



Ford. Volume and tuner knobs. Fits all without electronic radios 1990 & up.

76952 (2)




Universal. Includes inner and outer knobs. Fits split and "D" shape stems on most aftermarket radios.

## Seat Adjusting Handle

**HELP!**  
Interior

77199 (2)

- Includes Driver's and Passenger's Sides. Fits S-10 Trucks and Blazer/Jimmy SUVs 2003-98, Oldsmobile Bravada 2001-98
- Fixes seats with broken release shafts.
- No need to buy entire seat adjuster mechanism.

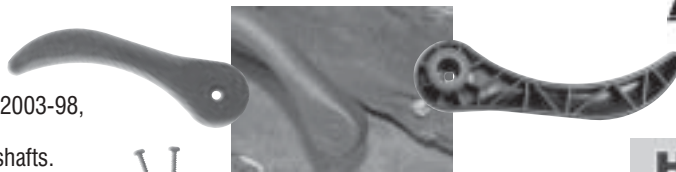

Attaches directly to broken stud.

**Driving**  
reNEW

**HELP!**  
Makes Customers for **Life**

Visit us at [www.motormite.com](http://www.motormite.com)

\*Combined for

**BETTER VALUE**