


Seat Belt Components



74310 (1)



Shoulder Harness Retainer

Black. Fits seat back or headrest of most GM models 1974 & on. Original equipment replacement part of both triangular and rectangular styles.

74325 (1)



Seat Belt Clip Retainer

Installs quickly and easily on all 2" wide belts. Prevents belt tongue clip from sliding to floor when belt is retracted.

74356 (1)



Car Seat Locking Clip

Universal. Used with baby car seats to ensure proper and safe car seat retention. Must be used with cars having free-sliding buckles.

74357 (2) *Driving TOUGH NEW*



Seat Belt Stop Kit

Universal. Easily snaps together. Prevents buckle from sliding down belt. Part is not available separately from many manufacturers. Kit services 2 seat belts.




Shock Mounting Hardware



- Shock bushings made from a durable resilient rubber compound. Shock absorber bushings must be resilient rubber to properly position shock absorbers
- Replaces worn or broken shock mounting bolts
- Replaces worn, split or missing shock mounting bushings and stabilizer end links

31010 (1) *For Better Value, Order 31017*



Bushing

.688" x 1.38" x 1.70". Fits GM and Chrysler/Dodge/Plymouth.

31012 (2) *For Better Value, Order 31017*



Bushings

.360" (tapers to .415") x 1.0" x .875". Small size. Fits GM and Chrysler/Dodge/Plymouth. Also fits 80% of sway bar link applications.

31016 (2) *For Better Value, Order 31019*



Bushings

.400" x .996" x .556". Fits Ford and Mercury.


31018 (2) *For Better Value, Order 31019*



Bushings

.436" x 1.22" x .665". Fits Ford, Lincoln, Mercury. Also fits sway bar link applications.


31017 (3)*



Bushings *BETTER VALUE*

Assortment of shock absorber and end link bushings. Includes 2 sizes to cover several applications. Fits various Chrysler and GM cars and trucks from 1965 & up. Sizes: .688" x 1.38" x 1.70" (**31010, qty. 1**), .360" (tapers to .415") x 1.0" x .875" (**31012, qty. 2**).

31019 (4)*

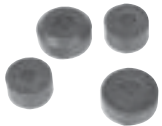

Bushings *BETTER VALUE*

Ford assortment of shock absorber and end link bushings. Includes 2 different sizes to cover most Ford applications from 1965 & up. Sizes (2 each): .400" x .996" x .556" (**31016**), .436" x 1.22" x .665" (**31018**).

Shock Mounting Hardware (continued)

03954 (2)



Clip Nut-Shock Towers

5/16-18. Panel thickness of .025" - .150".

31013 (1)



Shock Bolt

Replacement rear shock bolt. OE style replacement. M12 x 1.75 thread size. Fits Chrysler, Dodge, and Plymouth minivans 1994-84.

31001 (1)



Shock Bolt Kit


Universal for eyelet mount shocks. Includes bolt, bushings, nuts and washer.

31020 (2)



Upper Shock Insulators

Fits GM Silverado, Suburban, Tahoe, Sierra, Yukon, Avalanche, Escalade 2004-99. Two are included to service both shocks. Designed with a more durable pilot ring to prevent annoying rattle or squeak in the front end.

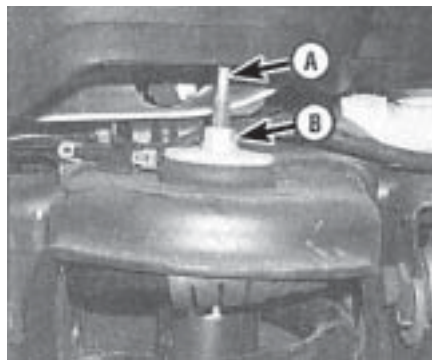

Driving
reNEW

A - Shock absorber stem
B - Upper shock insulator

S

Spare Tire Hold-Downs

HELP!
Exterior

41062 (1)



Fits Ford, Lincoln, and Mercury passenger cars 1996-80. Replaces worn, cracked or lost spare tire hold-down nut.

41064 (1)



Universal. Fits 5/16", 3/8" or 8mm threaded rod.

41068 (1)



Universal. Retains 13", 14", or 15" wheels. Includes long J-bolt, hold-down nut, and special retaining plate.

Spark Plug Accessories

HELP!
Underhood

49094 (1)



Spark Plug Starter and Remover

Holds plug firmly to permit installation in tight places. 4" long.

49807 (9)



Terminal Ends

Fits 7mm ignition wire terminal ends. Includes straight plug ends, 90% plug ends and distributor cap ends.

49808 (2)



Spark Plug Boot Adapter

Fits Cavalier 2002-95, Beretta 1994-90, Alero 2001-99, Skylark 1998-88, Grand AM 2001-88, Malibu 1999-97, Achieva 1998-92, Cutlass Calais 1991-88, Supreme, Sunfire 2002-95.

Driving
reNEW




Visit us at www.motormite.com

Spark Plug Non-Foulers


Spark Plug Non-Fouler
Applications, pages 521-529





- Temporary fix for minimizing the effect of spark plug fouling due to oil in the combustion chamber
- Just screw non-fouler into spark plug opening, then screw spark plug into non-fouler
- Note: Install non-foulers only on cylinders fouling spark plugs. Do not install on more than half of engine's cylinders.
- Before installing, coat threads with anti-seize compound
- Using non-foulers will increase the spark plugs heat range
- Use of a colder spark plug heat range is recommended

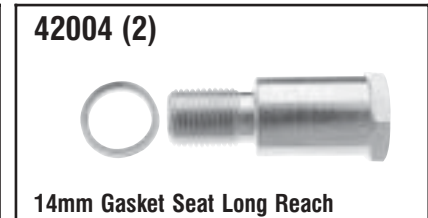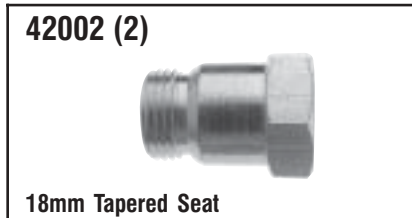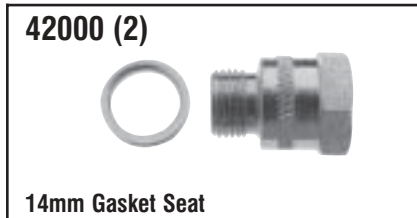

HELP!® 342004 (24) 24 per card

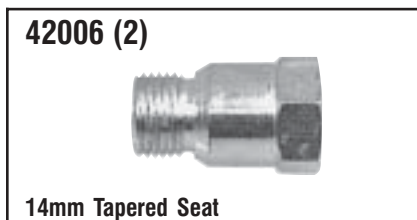

HELP!® 342006 (24) 24 per card

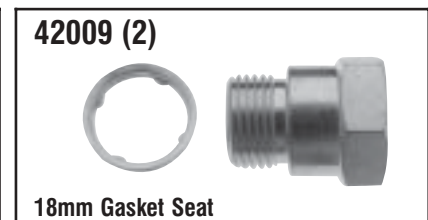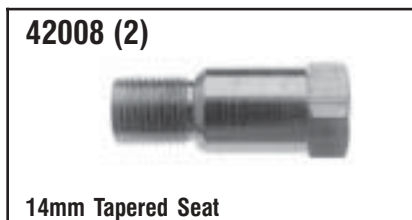


2 Per Card.




Spark Plug Wire Retainers




- Prevent wires from chafing against brackets & hot exhaust manifold.
- Prevent drivability problems due to spark crossfire (jumping of spark from one wire to another).
- Keep wires organized in engine compartment.

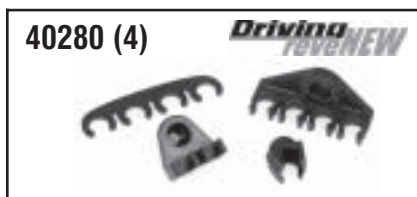


Assortment of 4 Ford OE style retainers. Fits 1997-91 Aerostar, 2001-91 Explorer, 2003-91 Ranger. Includes two 5/16" four wire, one 5/16" two wire, and one 5/16" single wire.

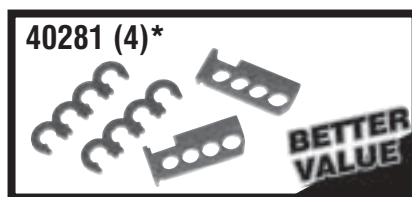


Universal style 6, 7, 8mm. Contains 2 open four slot pieces and 2 four wire locking style. Open slot style designed so retainer slots can be separated into 2, 3 or 4 wires. **Kit contains 40282 and 40286.**

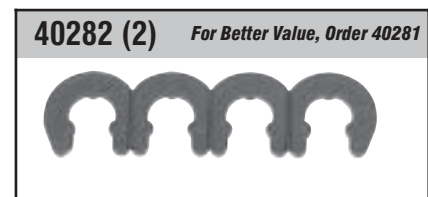

Universal 6, 7, 8mm. Four, three or two wires. Designed so retainer slots can be separated.

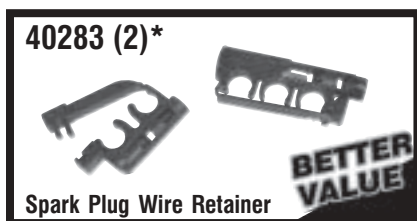

Ford OE locking style. 7mm. Includes 1 two wire retainer and 1 three wire retainer. **Kit contains 40288 and 40289.**

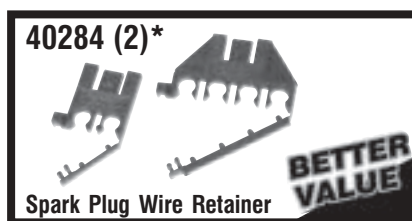

GM OE locking style. 7mm. Includes 1 two wire retainer and 1 four wire retainer. **Kit contains 40290 and 40291.**



Universal 6 & 7mm. Locking. Four wire. Stud slotted.

NEW PRODUCT HOTLINE - 1-800-336-3575

*Combined for **BETTER VALUE**

Spark Plug Wire Retainers (continued)

40288 (1) For Better Value, Order 40283



OE style Ford/Lincoln/Mercury. Locking 7mm. Three wire. Stud slotted.

40289 (1) For Better Value, Order 40283



Ford/Lincoln/Mercury. Locking 7mm. Two wire. Stud slotted.

40290 (1) For Better Value, Order 40284



GM. Locking 7mm. Four wire. Bracket style.

40291 (1) For Better Value, Order 40284



GM. Locking 7mm. Two wire. Bracket style.

40292 (2)



Universal 6 & 7 mm. Six wire. 3 x 3.

40295 (4)



Universal Assortment 6 or 8mm, GM Trucks V8 1980/up.

Speedometer Parts

HELP!
Underhood

03367 (1)



Speedometer Cable Lubricant

Graphited oil lubricates cables, locks, etc. 1/2 ounce squeeze tube.

03368 (1) For Better Value, Order 03369



Universal Speedometer Cable Kit

72" cable length. Cut to length & crimp included tip onto cable. Fits most cars.

03369 (1)



Universal Speedometer Cable Kit

125" cable length. Cut to length & crimp included tip onto cable. Fits most cars, trucks and vans. **Kit contains 03368 and 10104.**

BETTER VALUE

03374 (1)



Universal Tip and Assembly Tool

Repair broken or stripped speedo cables by crimping on a new tip.

10104 (1) For Better Value, Order 03369



Universal Speedometer Cable Kit

113" cable length. Cut to length & crimp included tip onto cable. Fits trucks & larger vehicles.


Splash Shields

HELP!
Undercar

VW Splash Shields

41098 (1)

- VW splash shields are often damaged by pot holes or curb stubs
- Replace during oil change, guard must be removed to get to filter.
- Kit includes all mounting hardware.

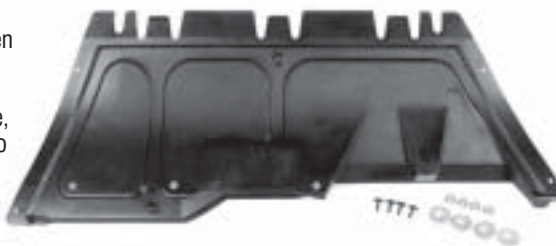

Driving
reNEW

VW Beetle, Golf, Jetta, Passat 2004-98;
Audi A4, A6 2004-98. Includes hardware for easy installation.

HELP!
Makes Customers for **Life**

Visit us at www.motormite.com

*Combined for

BETTER VALUE

Spring Center Bolts



- Use to compress/hold leaf spring stacks
- UNF/SAE threaded bolts can be cut to length
- Use in agricultural, automotive, fleet and marine applications
- Ideal for suspension work




Thread Size	Length	Thread Length	Head Type	HELP! Part # (Qty.)
Round Fillister	5/16-24	12"	10"	03755 (1)
Round Fillister	3/8-24	12"	10"	03761 (1)
Round Fillister	7/16-20	12"	10"	03762 (1)
Round Fillister	1/2-20	14"	12"	03766 (1)

Springs - Extension



- Excellent memory, reliability and longevity
- Typical usage on throttle return pedal, to hold part in tension
- Made from precoated stock for high quality appearance and corrosion resistance
- Maximum extended length is a function of material, coil diameter and wire size. Care must be taken not to overextend the spring.



Free Length	O.D.	Wire Dia.	HELP! Part # (Qty.)
Assortment, 5 pc. - 5" - 6"	1/8" - 7/16"	.020" - .060"	59001 (1)
Assortment, 5 pc. - 2-9/16" - 6-3/4"	1/4" - 7/16"	.030" - .035"	29009 (1)
Assortment, 5 pc. - 1-7/8" - 10-1/2"	3/8" - 3/4"	.030" - .090"	29016 (1)
5-1/2"	11/16"	-	29010 (2)



Springs - Pedal Return



29002 (1) *For Better Value, Order 29004*

Overall Length 17-1/2"

Wire Dia. 3/32". Coil Length 2-1/4". Light duty. Hook end. Bend to length.

29003 (1) *For Better Value, Order 29004*

Overall Length 17-1/2"

Wire Dia. 1/16". Coil Length 3-3/8". Heavy duty. Hook end. Bend to length.

29004 (4)

Overall Length 17-1/2"

Wire Dia. 1/16" to 3/4". Coil Length 1-7/8" to 3-3/8". Heavy duty. Hook end. Bend to length. **Kit contains 29002, 29003 and 29007.**

29007 (2) *For Better Value, Order 29004*

Overall Length 8-1/2"

Coil Dia. 3/4". Coil Length 1-7/8". Universal. Hook end. Bend to length.

Springs - Throttle Return



29005 (2)

Spring - Throttle Return

Length 1-13/16".

29006 (2)

Spring - Throttle Return


Overall Length 9", Wire Dia. .060". O.D. 7/16".

29008 (2)

Spring - Throttle Return

Overall Length 9-1/2", O.D. 25/62".

Springs - Throttle Return (continued)

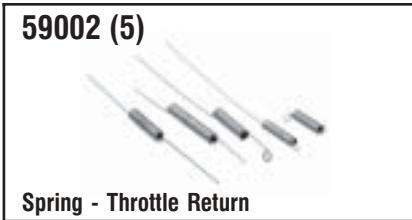


59002 (5)

Spring - Throttle Return

Universal Carburetor Spring Assortment.
5 per card. Coil lengths: 2", 2", 1-3/4",
2-3/4", 1-3/8".


Dorman® 705-139 (1)

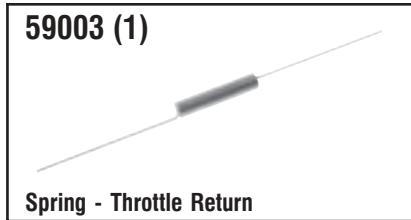

59003 (1)

Spring - Throttle Return

Overall Length 8-1/4", O.D. 15/32".

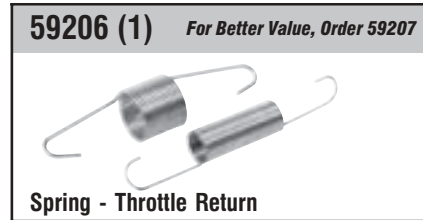


59206 (1) For Better Value, Order 59207

Spring - Throttle Return

Universal OE style. 29/32". Returns throttle
to idle when accelerator is released. Double
spring set-up for safety precaution.

Dorman® 705-145 (1)

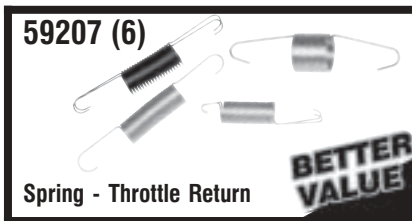

59207 (6)

Spring - Throttle Return

Kit contains 59206, 59208 and 29209.



59208 (1) For Better Value, Order 59207

Spring - Throttle Return

Ford Taurus, Mercury /Sable.



59209 (1) For Better Value, Order 59207

Spring - Throttle Return

GM Various cars and trucks 1991-82.

S Starter Mounting Bolts

START!

- OE replacement starter bolts match original design and grade



Type 1



Type 3



Type 4

Thread	Length	Type	Application	START! Part # (Qty.)
3/8-16	1-1/2"	3	Ford	72216 (1)
3/8-16	1-9/16"	3	Ford	72182 (1)
3/8-16	1-7/8"	1	GM 3.8L V6	72177 (1)
3/8-16	2-13/64"	1	GM 4.3 & 5.0L	72219 (1)
3/8-16	3-5/8"	1	GM 6 & 8 cyl.	72178 (1)
3/8-16	4"	4	Universal	72212 (1)
3/8-16	4-1/2"	1	GM 4.3 & 5.0L	72213 (1)
3/8-16	4-5/8"	1	GM 5.0 & 5.7L	72179 (1)
3/8-16	5"	4	Universal	72214 (1)
3/8-16	6"	4	Universal	72215 (1)
7/16-14	1-1/2"	4	Chrysler 6 & 8 Cylinder	72183 (1)
M10-1.50	45mm	1	GM 2.0, 2.5 & 3.4L	72180 (1)
M10-1.50	75mm	4	Universal	72217 (1)
M10-1.50	100mm	4	Universal	72218 (1)
M10-1.50	113mm	1	GM 2.0, 2.5 & 3.4L	72181 (1)


Kits for Better Value

Thread	Length	Type	Application	HELP! Part # (Qty.)
3/8-16	1-7/8", 3-5/8" & 4-5/8"	1	Assorted for GM Starters 1981-62	45640 (1)
M10-1.50	45mm & 113mm	1	GM 2.0, 2.5 & 3.4L	45636 (1)
3/8-16	1-9/16"	3, 4	Ford and Universal	45639 (1)
3/8-16	2-13/64"	1	GM 4.3L and 5.0L	45643 (1)
7/16-14	1-1/2" & 5-1/2"	4	Chrysler 6 & 8 Cylinder	45647 (1)
5/8-16 & M10-1.50	100mm	4	Universal	45649 (1)

Starter Shims


START!

- Correctly shimming starter insures proper clearance to the flywheel, prevents grinding noises and prolongs starter and flywheel life.

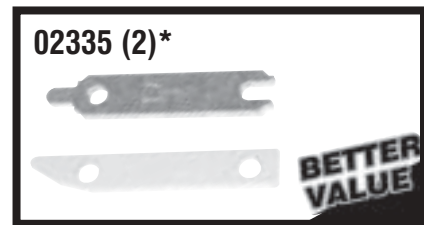

0.015", 0.030" & 0.060" GM Straight and GM 10MT Metric. Kit contains 02336 and 02356.

Thickness	Application	START! Part# (Qty.)	HELP! Part# (Qty.)
0.015"	GM Horseshoe	72233 (3)	
0.015"	GM Side Mount	72232 (3)	
0.042"	GM 10MT Metric	72234 (3)	02356 (3)
0.100"	Ford 2 bolt	72236 (1)	02359 (1)
0.100"	Ford 3 bolt	72238 (1)	02360 (1)
Assorted	0.015", 0.030" & 0.060" GM Straight	72176 (1)	02336 (1)
Assorted	0.020" & 0.050" Offset Ford & Jeep	72235 (1)	02357 (1)
Assorted	0.015", 0.030" & 0.060" GM Offset	72237 (1)	02350 (1)

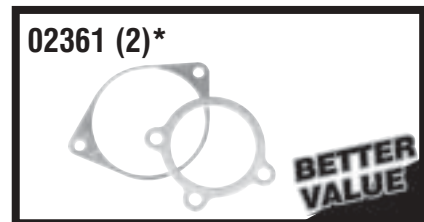

Ford 2 bolt and Ford 3 bolt. Kit contains 02359 and 02360.

Starter Solenoid Heat Shield

START!



GM Solenoid Heat Shield


Solve hot start problems on GM vehicles by shielding starter solenoid from exhaust heat.

HELP!® 45629 (1) Carded

Steering Column Components


**HELP!
Interior**

- Replace steering column components broken in use or as a result of vehicle theft.

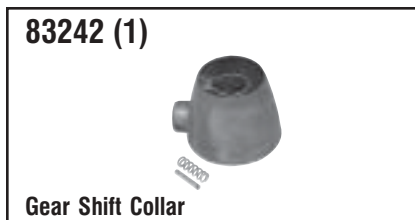


Gear Shift Collar

Ford. Includes detent spring. Automatic transmission. 1977-73 F100/350 pickup, E100/350 van, Bronco.

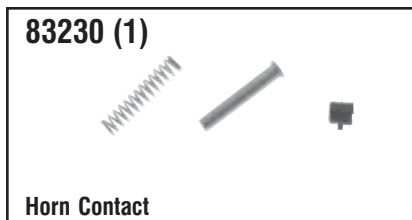

Horn Contact

Fits GM cars and trucks 1989-65. Includes spring, eyelet and insulator. Located inside the turn signal cancel cam. Malfunctions from breakage. Horn will not work when broken.

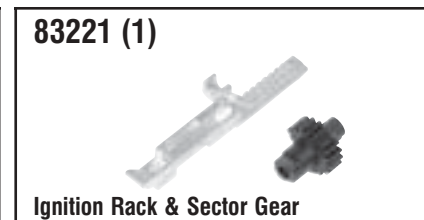

Ignition Rack & Sector Gear

GM w/o tilt or tilt telescopic wheel. 2000-69.

NEW PRODUCT HOTLINE - 1-800-336-3575

*Combined for **BETTER VALUE**

S

Steering Column Components (continued)

83209 (1)



Ignition Switch Actuator

GM 1994-88 various models.

83213 (1)



Ignition Switch Actuator

Fits Ford cars 1994-86.

83280 (1)



Ignition Switch Actuator

Ford F-Series Trucks, E-Series Vans and Bronco with tilt wheel 1991-89.

83211 (1)



Ignition Switch Kit

Fits GM & Chrysler cars and trucks 1995-77 w/ tilt wheel. If the rack and pinion fails, the steering wheel and/or shift lever may not move in or out of the locked position. Car starts intermittently or not at all.

S

Steering Coupling

HELP!
Interior

- Eliminates looseness & clunking noises associated with worn steering coupling discs


31000 (1)



Steering Coupling Disc

3-3/16" dia. GM, Ford and Chrysler 1976 & up. Includes various hardware to cover various applications. **Kit includes 31000 and 31005.**

31002 (1)

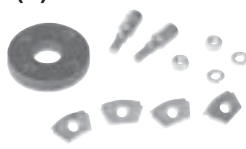

Steering Coupling Disc

2-5/8" dia. Chrysler, Ford & GM.

31004 (1)



Steering Coupling Assembly

Fits Ford E100/300 vans 1974-73. F100/350 pickup 2WD 1974-73. 2WD w/o p.s. 1975.

31005 (1) *For Better Value, Order 31000*



Steering Coupling Disc

3-3/16" dia. Fits Ford/Mercury full-size 1976 & up. Lincoln Mark VII 1983-80. Lincoln and Lincoln Town Car 1982 & up.

31008 (1)



Steering Coupling Assembly

Fits Ford Bronco w/ p.s. 1991-88. F-super duty w/ p.s. 1991-82. F150/350 pickup w/ p.s. 1991-82.

31011 (1)



Steering Coupling Assembly

GM cars and trucks 1986-76.

31015 (1)



Steering Coupling Assembly

GM cars, trucks and vans 1990-73.

Steering Speed Sensors



Steering Speed Sensor

31025 (1)

GM cars and trucks 2004-94.
Works in conjunction with speed sensitive steering.




Driving
REVENEW

- Driver experiences a light feel in the steering when this fails
- Fits many popular GM car and truck applications

Suspension - Castellated Nuts



- For use in applications requiring a positive mechanical lock such as tie rod ends, ball joints, etc.
- Stocking item for agricultural, automotive and fleets
- Zinc plated to resist rust and corrosion
- 13559 features an assortment of popular automotive castellated nuts
- Use with a cotter pin and hole in bolt or stud for a positive lock

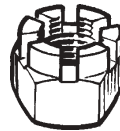

13559 (4)



Castellated Nut Assortment

BETTER VALUE

Thread Size	Hex Size	Height	HELP! Part # (Qty.)
1/2"-20, 9/16"-18, 5/8"-18	3/4", 7/8", 15/16"	9/16", 39/64", 23/32"	13560 (3)
7/16"-20	11/16"	29/64"	13571 (1)
M12-1.25	18mm	-	13580 (1)

Thread sizes: 1/2"-20, 9/16"-18, 5/8"-18, 7/16"-20. Hex Sizes: 3/4", 7/8", 15/16", 11/16". Heights: 9/16", 39/64", 23/32", 29/64". **Kit contains 13560 and 13571.**

Suspension Parts



13503 (2)



Lower Control Arm U-Bolts

Holds lower control arm to frame. Includes 2 U-bolts and 4 prevailing torque nuts. Fits GM C&K pickups 1986-73, R&V pickups 1991-87, G&P Series vans 1995-73.

13585 (4)

For Better Value, Order 13586



End Link Nuts

M12-1.75 with captured washer. Chrysler Vans Town & Country, Caravan, Grand Caravan, Voyager, Grand Voyager 2000-96.

13586 (4)*

Driving
REVENEW



Ball Joint and Sway Bar End Link Nuts

BETTER VALUE

Includes two 1/2"-13 ball joint nuts with nylon insert and two M12-1.75 sway bar end link nuts with captured washer and nylon insert. Fits Taurus, Sable 2004-96; Town & Country, Caravan, Grand Caravan, Voyager, Grand Voyager 2000-96. **Kit includes 13585.**

31065 (1)



Torsion Bar Mount

GM S10/S15 Pickup, Blazer 1994-89. Improved design eliminates clunking when going over bumps & can be installed without removing cross member.

S