



Threaded U-Bolt Kits



- For mounting leaf springs on passenger cars, trucks, RV's and trailers.
- Kits include 2 U-Bolts and 4 nuts.
- Grade 4 for use in suspension systems.
- Never mix the 2 types of U-bolts.
- Replace with the same configuration as OE.
- Refer to the vehicle's shop manual for specific repair procedures, cautions and warnings.
- Torque U-bolts to specifications found in shop manual.
- DO NOT overtorque!

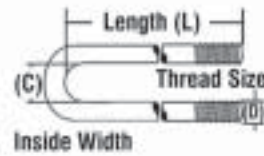

Round

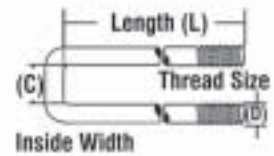

Square

Type	Thread Size (D)	Length (L)	Inside Width (C)	HELP! Boxed Part # (Qty.)	HELP! Part # (Qty.)
Square	1/2"-20	9-3/8"	2-5/8"		35616 (1)
Square	1/2"-20	3-3/4"	2-1/8"	35509 (2)	
Square	1/2"-20	4-1/4"	1-13/16"	35505 (2)	
Square	1/2"-20	6"	2"	35513 (2)	35613 (1)
Square	1/2"-20	6"	2-1/16"		35612 (1)
Square	9/16"-18	8-1/8"	2-5/8"		35635 (1)
Square	9/16"-18	12-1/2"	2-5/8"		35637 (1)
Square	5/8"-18	13-1/8"	2-7/16"		35652 (1)
Square	5/8"-18	13-1/2"	2-5/8"		35659 (1)
Square	5/8"-18	8-3/4"	3-1/8"		35663 (1)
Square	5/8"-18	8"	2-5/8"		35654 (1)
Square	5/8"-18	9-1/2"	2-5/8"		35656 (1)
Square	5/8"-18	11"	2-1/2"		35657 (1)
Square	5/8"-18	13"	3-3/16"		35662 (1)
Round	7/16"-20	6-1/8"	2-1/4"	35501 (2)	
Round	7/16"-20	6-3/4"	3-1/16"	35607 (1)	
Round	7/16"-20	6-3/4"	3-1/8"	35608 (1)	
Round	7/16"-20	6-1/2"	2-1/2"	35502 (2)	
Round	7/16"-20	8-3/8"	2-7/8"	35605 (1)	
Round	1/2"-20	8-1/16"	3-1/8"	35511 (2)	35624 (1)
Round	1/2"-20	6-1/2"	3-1/8"	35506 (2)	35621 (1)
Round	1/2"-20	7"	2-7/8"	35510 (2)	35617 (1)
Round	1/2"-20	7-1/2"	3-1/8"	35507 (2)	35623 (1)
Round	1/2"-20	7-1/2"	3-1/2"	35522 (2)	35622 (1)
Round	1/2"-20	8-3/8"	3"		35619 (1)
Round	1/2"-20	9"	3-1/8"	35512 (2)	35626 (1)
Round	1/2"-20	9"	3-1/4"	35527 (2)	35625 (1)
Round	9/16"-18	7-3/4"	3"		35639 (1)
Round	9/16"-18	7-3/4"	3-3/8"		35642 (1)
Round	9/16"-18	8-5/8"	3-3/8"		35643 (1)
Round	9/16"-18	10-5/8"	3-3/8"		35645 (1)
Round	9/16"-18	7"	3-3/8"	35541 (2)	35634 (1)
Round	5/8"-18	8-5/8"	3-3/4"		35670 (1)
Round	5/8"-18	8-1/4"	3-1/8"		35661 (1)
Round	5/8"-18	8-3/4"	3-1/4"		35664 (1)
Round	5/8"-18	13-1/4"	3-1/4"		35666 (1)
Round	5/8"-18	8-5/8"	3-1/2"		35668 (1)
Round	5/8"-18	7-1/2"	3"	35560 (2)	35653 (1)
Round	5/8"-18	9-1/2"	3-13/16"		35672 (1)



U-Joint Parts

U-Joint Kit Applications,
pages 544-547

HELP!
Undercar

- Replaces lost or damaged U-Joint straps or bolts
- Precision engineered quality


81000 (1)



Strap Retainer

GM 2003-67.


81002 (1)

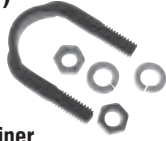

U-bolt Retainer

GM 2003-65.


81004 (1)



U-bolt Retainer

Ford. 1-1/8" OD bearing.


81006 (1)



Strap Retainer

Chrysler 1996-68. 1-5/64" OD bearing.

81008 (1)



U-bolt Retainer

Jeep 1980-62.

81018 (1) *For Better Value, Order 81020*



Strap Retainer

Jeep Cherokee, Grand Cherokee, J & CJ Series, Comanche, Scramble, Wagoneer, Grand Wagoneer, Wrangler 2002-81.


81019 (1) *For Better Value, Order 81020*



Strap Retainer

GM Trucks 2003-73; Dodge Trucks 2002-88.

81020 (2)




Strap Retainers

BETTER VALUE

Contains two different straps for broad coverage. Fits GM Trucks 2003-73; Dodge Truck R1500-3500 Series Pickup/Van 2000-94, B150-350 1998-88, D/W150-450 Series Pickup 1993-88; Jeep Cherokee, J & CJ Series, Comanche, Scrambler, Wagoneer, Wrangler 2002-81. **Kit contains 81018 and 81019.**

81025 (8)



Clip Retainers

8 pcs. GM, Ford and Chrysler. Retains U-joint bearing caps in the yoke assembly.


U

Vacuum Components

HELP!
Underhood

- Auxiliary vacuum reservoirs for vacuum operated systems.
- Cracked and leaking tanks will cause faulty accessory operation - especially under acceleration & going up hills.
- Refer to Dorman Catalog for a complete line of VACU-TITE! vacuum connectors.


41050 (8)



Vacuum Cap Assortment

VACU-TITE! 47366 (1)


46319 (6)



Test Plug/Cap Assortment

Includes 3 vacuum caps and 3 stepped vacuum plugs.


47051 (1)

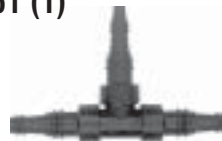

Tee

Universal tee - 1/8" - 3/8".
VACU-TITE! 47349 (1)


47076 (1)



Vacuum Storage Canister

GM 1994-74 cars and trucks.


47077 (1)



Vacuum Storage Canister

GM 1995-83 cars and trucks.

47092 (1)



Elbow

Universal rubber 1/4" ID 90° degree vacuum hose connector. Can be used to connect transmission modulator to steel vacuum line. Use universally to make 90° degree bends in your vacuum system.

Visit us at www.motormite.com

*Combined for

BETTER VALUE

Vacuum Components (continued)

47100 (5)



Assortment - Vacuum Tees

VACU-TITE! 47359 (1)

47101 (6)



Assortment - Hose Connectors

VACU-TITE! 47360 (1)

47149 (1)



Check Valve

Universal one-way check valve. Maintains system vacuum. Used in vacuum systems or any vacuum operated accessory.

47150 (1)



Two-Way Check Valve

Eliminates vacuum system leaks. Used in vacuum systems or any vacuum operated accessory. GM models 1996-84.

47380 (55)



Vacuum Connector Assortment

Value Pack contains 47000 (5), 47001 (5), 47010 (10), 47011 (10), 47012 (10), 47302 (10), 47352 (5).

47388 (30)



Vacuum Cap Assortment

Value Pack contains 5 each of 6 different sizes: 5/32" (47390), 3/16" (41041), 1/4" (47392), 7/32" (47393), 5/16" (41045), 3/8" (41046).

Valve Cover Hold-Downs

HELP!
Underhood

- Steel valve cover hold-downs spread the bolt load on steel valve covers to prevent warpage & leaking.

42083 (2)



1-1/2" long. (Retainer)

Valve Cover Retainer. Universal. 1/4"-20 x 3/8". (Bolt).

42084 (1)

For Better Value, Order 42087



5" long

Valve Cover Retainer. Includes attaching hardware.

42085 (1)

For Better Value, Order 42087



3" long

Valve Cover Retainer.

42086 (1)

For Better Value, Order 42087



4" long

Valve Cover Retainer.

42087 (3)




Valve Cover Retainer Assortment. Contains 3 most popular sizes - 3", 4" and 5". Includes 1/4"-20 x 3/4" bolt. Kit contains 42084, 42085 and 42086.


Water Pump Stud Kits

HELP!
Underhood


- Recommend new stud kits with water pump sales.
- Display near coolant or water pumps.

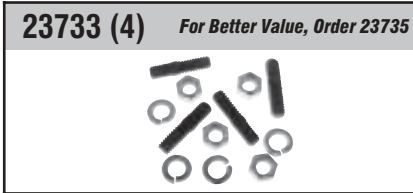


5/16"-24. Fits most GM water pumps. Includes 4 studs, 4 nuts and 4 washers.

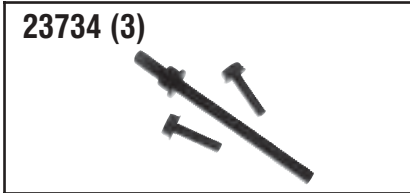


For mounting water pump housing to engine. Includes 1 stud and 2 bolts. Fits Chrysler 2.2L and 2.5L 1988-84.

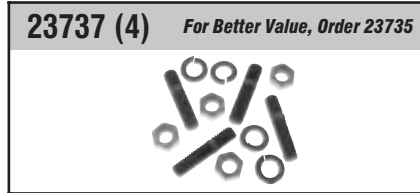


M8-1.25. Fits S10 Blazer, Jimmy, Pick-up, 1994-82. Includes 4 studs, 4 nuts, 4 washers.

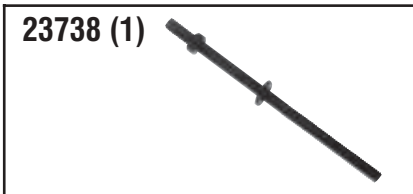


Fits Chrysler 2.2L and 2.5L 1992-89.

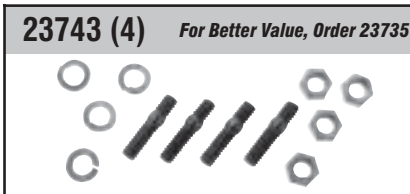

M6-1.0. Fits imports Honda, Nissan, Toyota and others. Includes 4 studs, 4 nuts, 4 washers.

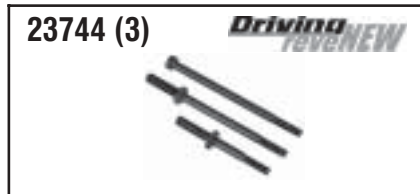

Ford, Lincoln and Mercury cars and trucks w/3.8L, 4.6L, 5.0L, 5.8L. Includes 1 bolt and 2 studs. Bolt Size: 5/16"-18 x 5". Stud Size: 5/16"-18 x 3/8" x 16 x 5-3/8", 5/16"-18 x 3/8"-16 x 3-7/16".

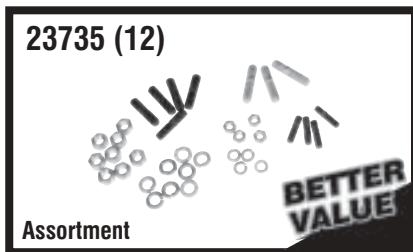

Assortment includes 12 studs, 12 nuts and 12 lock washers. Covers 3 most popular sizes: 5/16"-24, M8-1.25, M6-1.0. Fits most GM water pumps and imports including Honda, Nissan and Toyota. **Kit contains 23733, 23737 and 23743.**



Four individual 4ML tubes keep product fresh.



Heater Bypass Tube

Chrysler 3.9L, 5.2L, 5.9L.

- Replace when changing Dodge 3.9L, 5.2L and 5.9L water pumps
- OE part corrodes, and seizes to pump, can't be removed
- Recommended every time a customer needs a new water pump

80022 (60) *Driving REVENUE*

Coolant O-Rings - 4 mm

- 12 SKU Technician tray of the fastest moving distributor O-rings (5 each)
- Recommend to your Service Dealers to keep a tray in stock
- Don't hold up a bay waiting for a small part needed to complete the job
- Application specific
- Needed when replacing coolant tubes and water pumps
- Applications displayed on inside cover for each part number

Visit us at www.motormite.com


*Combined for **BETTER VALUE**

Wheel Cap Screws



- Retains center wheel cap
- Plated for corrosion resistance


13836 (3) *For Better Value, Order 13838*

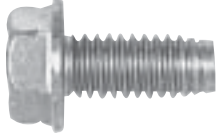

5/16"-18 x 3/4"

GM. Retains center cap on pickups, full-size vans, Blazers, Jimmy's and Suburbans 1989-76. Plated for corrosion resistance. 3 per wheel.


13837 (3) *For Better Value, Order 13838*



1/4"-20 x 5/8"

Chrysler, Dodge, Plymouth. Retains center caps on cars 1990-79. Located on the inside of the wheel. Plated for corrosion resistance. 3 per wheel.

13838 (9)




Wheel Cap Screw Assortment

BETTER VALUE

Contains 3 each of the following sizes: 5/16"-18 x 3/4", 1/4"-20 x 5/8", 1/4"-20 x 3/4". Assortment covers GM C&K Series pickups, SUVs, G-Series vans 1989-76; Chrysler cars 1990-79; Ford F150-350 pickups, E150-350 vans, Bronco 1997-79. **Kit contains 13836, 13837 and 13840.**

13840 (3) *For Better Value, Order 13838*

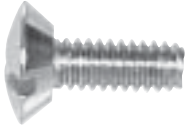

1/4"-20 x 3/4"

Ford Truck. Retains center cap on 1996-79 F150-350 pickups, E-Series vans and Bronco 1997-79. Chrome plated. 3 per wheel.


Wheel Hub Parts

Wheel Hub Screw Applications, page 553



- Oversized head & shoulders for exact fit

13800 (6)



8-32 x 1-1/2", Torx Head

Black. GM K&V Pickups, Blazer & Suburban 1991-85.

13801 (6)



3/16-24 x 1-1/4", Allen Head

Chrome. GM Trucks 1980-73, Ford Trucks 1979-64.


13802 (6)



8-32 x 1-1/2", Allen Head

Chrome. Ford F-Series Pickup, Bronco, Super Duty 2000-78.


13803 (6)



8-32 x 1-1/8", Torx Head

Chrome. Ford F150, Bronco w/Manual Locking Hubs 1996-95.

13804 (6)



8-32 x 1-1/8", Torx Head

Chrome. Ford Trucks w/Auto Locking Hubs 2000-80.

Locking Hub Nut and Wedge

13984 (1)



Driving reNEW

Thread: 1-5/8" x 16, Hex Size: 2-3/8", Height: 5/8". Ford Ranger 1997-90, Explorer 1994-91. Replace every time nut is removed. Kit includes locking wedge.

HELP!
Makes Customers for **Life**

NEW PRODUCT HOTLINE - 1-800-336-3575

*Combined for **BETTER VALUE**



Window Guides

Window Channel Guide
Applications, pages 553-554

HELP!
Interior

- Repairs loose or dislodged window glass.
- Glass will fall out of track when guide retaining clips break.
- Window guides locate edge of window glass in channel.
- Snap-on style.

45284 (2)



Rear Position

Dodge Dakota 1994-87.

45285 (1) *For Better Value, Order 45332*



Rear Position

GM Ciera, 6000, Century & Celebrity 1996-89.

45287 (1) *For Better Value, Order 45343*



Front Position

GM 98 Regency, 88 Delta Royale, Le Sabre, Electra Park Ave, Bonneville, Deville & Fleetwood 1993-85.

45294 (2)



Rear Position

Fits various GM models 1992-80. Buick: Electra, LeSabre. Cadillac: Seville. Chevrolet: Caprice. Oldsmobile: Delta 88, 98 Regency. Pontiac: Bonneville.

45295 (2) *For Better Value, Order 45332*



Rear Position

Rear door. Various GM models 1994-80. Celebrity, Century, Ciera & 6000; ST1 Pickup/Jimmy/Blazer; Citation, Omega, Phoenix & Skylark; Caprice, Impala, Electra, Le Sabre, Delta 88, 98 Regency, Deville, Fleetwood Brougham.

45296 (1) *For Better Value, Order 45343*



Rear Position

GM 98 Regency, 88 Delta Royale, Le Sabre, Electra Park Ave, Bonneville, Deville & Fleetwood 1993-85.

45297 (1)



Rear Position

GM Cavalier, Cimarron, Firenza, J2000/Sunbird & Skyhawk 1994-82.

45298 (1)



Front Position

GM Cavalier, Cimarron, Firenza, J2000/Sunbird & Skyhawk 1994-82.

45299 (1)



Rear Position

Front door. GM Corsica 1994-87.

45300 (1)



Rear Position

Rear door. GM Corsica 1996-87.

45330 (2)



Front & Rear Position

GM S,T Series Blazer, Pickup, Jimmy, Sonoma 1994-82, Oldsmobile Bravada 1994-91.

45332 (4)



Rear Position

Assortment includes 4 guides for broad coverage. GM Celebrity, Century, Ciera, 6000, S-Series Pickup/Blazer/Jimmy, Citation, Omega, Phoenix, Skylark, Caprice, Impala, Electra, LeSabre, Delta 88, 98 Regency, Deville, Fleetwood Brougham 1996-80. **Kit contains 45295 and 45285.**

45343 (2)



Front & Rear Position

Includes guides for rear and front position. GM 98 Regency, 88 Delta Royale, LeSabre, Electra Park Ave., Bonneville, Deville and Fleetwood 1993-85. **Kit contains 45296 and 45287.**

45344 (1)



Window Sash Guide Pin Kit

Fits Honda Accord 2 Door Coupe 1993-90. Includes all the hardware to do the complete job.

Visit us at www.motormite.com

*Combined for

BETTER VALUE